

**INSTALLATION INSTRUCTIONS**  
Yoke

Upon receipt, thoroughly inspect for any freight damage which should be brought to the attention of the delivery carrier. Compare the catalog description listed on the packing slip with the label on the carton to ensure that you have received the correct merchandise.




**IMPORTANT SAFETY INFORMATION**  
For Your Protection, Read Carefully

**Warning:** Risk of fire. Do not install insulation within 3 inches of fixture sides or wiring compartment, nor above fixture in such a manner as to entrap heat.

1. Electric current can cause painful shock or serious injury unless handled properly. For your safety, always remember the following:

- Turn off the supply power.
- Ground the fixture to avoid potential electrical shocks.
- Do not handle an energized fixture or energize any fixture with wet hands, when standing on a wet or damp surface, or in water.

2. Specific safety information concerning lamps:

- Match wattage of fixture and lamp exactly.
- Do not remove or insert lamp when power is on.
- Do not scratch glass or subject lamp to undue pressure as either may cause lamp breakage.
- Protect operating lamp from sources of moisture.
- If lamp is marked  it contains mercury. Follow disposal laws. See: [www.lamprecycle.org](http://www.lamprecycle.org).

1. Remove clips from mounting frame for all reflector types except APR (see Figure 1).
2. Pull socket cup included with mounting frame through ceiling opening (see Figure 2).
3. Remove bow spring from yoke assembly by pulling the ends of the spring through the slots in the uprights (see Figure 3).
4. With the curve of the bow spring facing downward, attach it to the top of the socket cup by inserting screw located in the top of the socket cup into the keyhole slot in the spring. Engage screw in slot and tighten it securely (see Figure 4).
5. Reinsert ends of bow spring into slots in uprights (see Figure 3). See Figure 9 for correct slot position.
6. Insert yoke assembly through ceiling opening (see Figure 5).
7. Attach yoke assembly to mounting frame by inserting feet into raised tabs (see Figure 6). Feet will snap into place.
8. Pull the socket cup down into the ceiling opening (see Figure 7) and attach to reflector (see separate instruction sheet).
9. Push reflector up into ceiling opening making sure that wallwash component (if present) is properly oriented with respect to the wall to be illuminated (see Figure 8).
10. If reflector does not rest tightly against ceiling, remove the reflector, loosen screws in yoke assembly, adjust appropriately (see Figure 9), tighten screws and re-attach reflector.

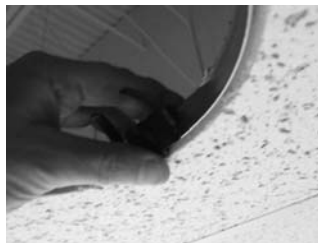


Figure 1



Figure 2

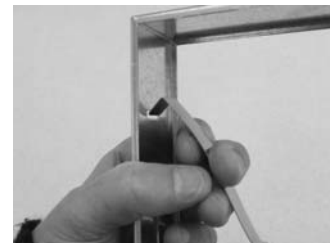


Figure 3



Figure 4



Figure 5

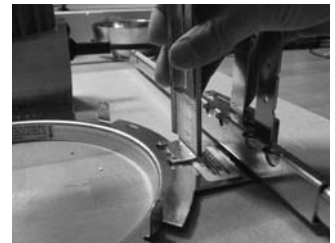


Figure 6



Figure 7

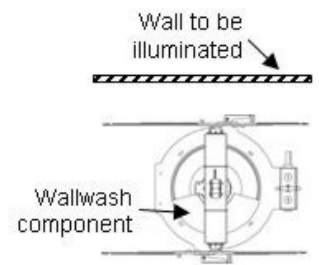


Figure 8

Trim Catalog No.	Distance from finished ceiling to top of yoke (in.)	Slot position
AFV/AFVW 4" TRT TRIM	9	Upper
AFV/AFVW 5" TRT TRIM	9 1/4	Upper
AFV/AFVW 6" TRT TRIM	9 3/4	Upper
AFV/AFVW 6" TRIM	10 3/4	Upper
AFV/AFVW 8" TRT TRIM	10 1/2	Upper
AFV/AFVW 8" TRIM	11 3/8	Upper
A/AW 4" TRIM	7 3/8	Lower
A/AW 6" TRIM	9 5/8	Upper
A/AW 8" TRIM	12	Upper
AH/AHW 4" TRIM	8 1/4	Upper
AH/AHW 6" TRIM	9 5/8	Upper
AH/AHW 8" TRIM	10 3/8	Upper
APR PAR20 4" TRIM	7 3/4	Lower
APR PAR30 4" TRIM	8 7/8	Upper
APR PAR30 6" TRIM	9 7/8	Upper
APR PAR38 6" TRIM	11 1/8	Upper
APR P36/AR111 6" TRIM	11 1/8	Upper
APR PAR38 8" TRIM	11 1/2	Upper

Figure 9